

SPECIFICATION SHEET

JFW MODEL 50BA-011-95

BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	200-6000 MHz
Configuration	Four individually controlled solid-state programmable attenuators
Enclosure Type	Mini-benchtop
Impedance	50 Ohms nominal
Attenuation Range	0-95 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command) Jog speed 5 (see JOG SPEED command)
VSWR	2.0:1 maximum
Attenuation Accuracy (guaranteed monotonic)	± 0.50 dB 1-3 dB ± 0.75 dB 4-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater)
Insertion Loss	8.8 dB maximum 4.0 dB typical @ 200 MHz 4.5 dB typical @ 700 MHz 8.2 dB typical @ 6000 MHz
RF Input Power*	+27 dBm average +33 dBm (no damage)
Switching Speed	4 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
DC Supply	+12 Vdc (100-240 VAC AC/DC transformer included) (0.05 Amps @ 120 VAC nominal) (0.03 Amps @ 240 VAC nominal)
Manual Control	Four Momentary Lever Actuator Switches with 7-Segment LED Displays (tap to step, hold to jog) (jog speed range is 0-10) (jog speed set to 0 will disable all levers)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET

JFW MODEL 50BA-011-95

BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt, Jog Speed

RF Connector

SMA female


Operating Temperature Range

0°C to +50°C

Physical Size

See outline drawing 092-8150

* Units shipped before 10/5/2017 (date code 1740) are only rated at +20dBm maximum. The JFW date code is a four digit code (YYWW) that follows the six digit serial number. For example date code 1908 is the 8th week of 2019.

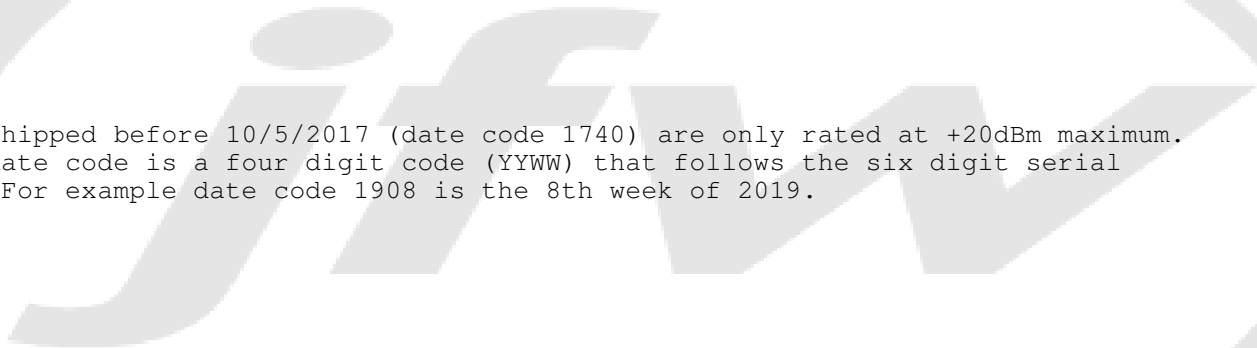

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
22793	04/29/2013	A	CLK 04/29/2013	28159	10/05/2017	D	CLK 10/05/2017
23461	11/19/2013	B	CLK 11/19/2013	28495	02/09/2018	E	TRS 02/09/2018
24239	11/04/2014	C	TRS 11/04/2014	29857	10/02/2019	F	TRS 10/02/2019