SPECIFICATION SHEET

JFW MODEL 50PA-1002-XX

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 100 MHz-40 GHz

Attenuation Range 0-31 dB in 1 dB steps

Configuration Individually controlled solid-state programmable

attenuators. Number of attenuators can be selected

from 1 to 16 attenuators.

Enclosure Type 19 inch rack mount

2RU high (for 1-16 attenuators)

Impedance 50 Ohms nominal

Startup/Default States Attenuators to 31dB at startup (see ATTEN command) (configurable) DHCP enabled (see NET command)

DHCP enabled (see NET command)
4 Ethernet users (see NET command)
Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

VSWR 1.6:1 typical 100 MHz-18 GHz

1.8:1 typical 18-26.5 GHz 2.0:1 typical 26.5-40 GHz 2.8:1 maximum 100MHz-40 GHz

Attenuation Accuracy ± 1.0 dB typical 100 MHz-18 GHz (Referenced to Insertion ± 1.5 dB typical 18-26.5 GHz

loss) ± 2.0 dB typical 26.5-40 GHz (typically monotonic) ± 3.5 dB maximum 100 MHz-40 GHz

Insertion Loss 1.8 dB typical @ 100 MHz

3.0 dB typical @ 3 GHz 4.5 dB typical @ 8 GHz 6.5 dB typical @ 18 GHz

8.5 dB typical @ 26.5 GHz 9.5 dB typical @ 40 GHz

RF Input Power +20 dBm average

+25 dBm (0.1dB compression)

Warning: DC voltage not allowed on RF connections

Switching Speed 1 microsecond typical

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET

JFW MODEL 50PA-1002-XX

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

Remote Commands Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block,

Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector 2.92mm female

Operating Temperature Range 0°C to +50°C

AC Supply 100-240 VAC @ 47-63 Hz

Physical Size See Outline Drawing 092-8602

Future Expansion If your testing needs change, you can have your 50PA-

1002-XX upgraded to have additional attenuators. This model is designed to control up to a maximum of 16

attenuators.

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN	# DATE	REV	APPR / DATE
	04/01/2016		TRS 04/01/2016	29850	09/30/2019	С	TRS 09/30/2019
26884	07/28/2016	A	BAC 07/28/2016	33255	03/15/2024	D	BAC 03/15/2024
29166	11/16/2018	В	TRS 11/16/2018				

Page 2 of 2 JFW FORM E-7-F REV F