### SPECIFICATION SHEET

# JFW MODEL 50PA-1019-XX

# PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

100 MHz-40 GHz Frequency Range 0-62 dB in 1 dB steps Attenuation Range Configuration Individually controlled solid-state programmable attenuators. Number of attenuators can be selected from 1 to 20 attenuators. Enclosure Type 19 inch rack mount 2RU high (for 1-20 attenuators) 50 Ohms nominal Impedance Startup/Default States Attenuators to 62dB at startup (see ATTEN command) (configurable) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command) All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users. **VSWR** 1.6:1 typical 100MHz-18 GHz 1.8:1 typical 18-26.5 GHz 2.2:1 typical 26.5-40 GHz 2.8:1 maximum 100MHz-40 GHz 0-31dB Attenuation Accuracy (Referenced to Insertion ± 1.0 dB typical 100MHz-18 GHz ± 1.5 dB typical 18-26.5 GHz ± 2.0 dB typical 26.5-40 GHz (typically monotonic) ± 3.5 dB maximum 100MHz-40 GHz 31-48dB  $\pm$  2.0 dB typical 100MHz-18 GHz  $\pm$  2.0 dB typical 18-26.5 GHz ± 4.0 dB typical 26.5-40 GHz ± 5.0 dB maximum 100MHz-40 GHz 49-62dB ± 3.0 dB typical 100MHz-18 GHz ± 3.0 dB typical 18-26.5 GHz ± 4.0 dB typical 26.5-40 GHz  $\pm$  8.0 dB maximum 100MHz-40 GHz Insertion Loss 4.0 dB typical @ 100MHz 5.5 dB typical @ 3 GHz 8.0 dB typical @ 8 GHz 11.5 dB typical @ 18 GHz 15.0 dB typical @ 26.5 GHz 18.0 dB typical @ 40 GHz

## -- CONTINUED --

+20 dBm average

+25 dBm (0.1dB compression)

Warning: DC voltage not allowed on RF connections

Page 1 of 2 JFW FORM E-7-F REV F

RF Input Power

#### SPECIFICATION SHEET

#### JFW MODEL 50PA-1019-XX

## PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Switching Speed 1 microsecond typical

> (after command is received and processed) (3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) Remote Control

RS-232 (up to 115200 Baud)

Remote Commands Attenuator Control Commands:

> Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block,

Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

2.92mm female RF Connector

Operating Temperature Range  $0^{\circ}C$  to  $+50^{\circ}C$ 

100-240 VAC @ 47-63 Hz AC Supply

Physical Size See Outline Drawing 092-8602 (1-16 Attens) See Outline Drawing 092-10438 (20 Attens)

Future Expansion If your testing needs change, you can have your 50PA-1019-XX upgraded to have additional attenuators. If

you have a model with less than 16 attenuators, it can be sent back to JFW to have additional attenuators

added up to 16 total attenuators.

However, the 20 Attenuator version uses custom metal work and models with less than 16 can not be upgraded to 20 attenuars without changing the entire chassis.

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN	# DATE	REV	APPR / DATE
	11/11/2016		BAC 11/11/2016	33255	03/15/2024	С	BAC 03/15/2024
29166	11/16/2018	A	TRS 11/16/2018	34053	03/27/2025	D	BAC 03/27/2025
29850	09/30/2019	В	TRS 09/30/2019				

Page 2 of 2 JFW FORM E-7-F REV F