

**SPECIFICATION SHEET**  
**JFW MODEL 50PA-366**  
**HANDOVER TEST SYSTEM**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Frequency Range	700-3000 MHz
Configuration	12 x 6 Handover Test System (see block diagram 092-5539 for attenuator addressing) (all ports are bi-directional) (full fan-out i.e. every path has its own attenuator) (the ADMIN password is located on rear panel)
Enclosure Type	19 inch rack mount @ 13RU high
Impedance	50 Ohms nominal
Attenuation Range	0-127 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command)
VSWR	1.7:1 maximum 1.5:1 typical
Insertion Loss	35 dB typical @ 700 MHz 39 dB typical @ 3000 MHz
Attenuation Accuracy	± 0.5 dB or 2% typical ± 0.75 dB or 2% maximum (guaranteed monotonic)
Power Divider Isolation	20 dB minimum
RF Input Power	1 Watt average
Switching Speed	10 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
AC Supply	100-240 VAC @ 47-63 Hz 4 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse#215-004, JFW#025-018
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (Up to 115200 Baud)

**--CONTINUED--**

**SPECIFICATION SHEET**  
**JFW MODEL 50PA-366**  
**HANDOVER TEST SYSTEM**

JFW Industries, Inc.  
 Phone: 317-887-1340  
 sales@jfwindustries.com  
 www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Path, Read Path, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector

SMA female

Temperature Range

0°C to +50°C

Physical Size

See outline drawing 092-5540



ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
15037	12/06/2007	B	TRS 12/06/2007	16179	08/07/2008	E	TRS 08/07/2008
15109	01/03/2008	C	TRS 01/03/2008	23030	07/30/2013	F	TRS 07/30/2013
15916	05/28/2008	D	TRS 05/28/2008	24239	07/09/2014	G	CLK 07/09/2014