

SPECIFICATION SHEET
JFW MODEL 50PMA-036
TRANSCEIVER TEST SYSTEM

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	500-6000 MHz
Configuration	8 Port Transceiver Test System (see block diagram 092-5910 for attenuator addressing) (all ports are bi-directional) (full fan-out i.e. every path has its own attenuator) (the ADMIN password is located on rear panel)
Enclosure Type	19 inch rack mount @ 5RU high
Impedance	50 Ohms nominal
Attenuation Range	0-95 dB in 1 dB steps
VSWR	1.8:1 maximum
Attenuation Accuracy	± 0.5 dB 1-3 dB ± 1.0 dB 4-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater) (guaranteed monotonic)
Insertion Loss	41 dB maximum 39 dB typical
Power Divider Isolation	21 dB minimum
RF Input Power	1 Watt average
Switching Speed	4 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
AC Supply	100-240 VAC @ 47-63 Hz 4 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-004, JFW #025-018
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET
JFW MODEL 50PMA-036
TRANSCEIVER TEST SYSTEM

JFW Industries, Inc.
 Phone: 317-887-1340
 sales@jfwindustries.com
 www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Path, Read Path, Read All Paths, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

Startup/Default States
 (configurable)

Maximum attenuation (see ATTEN STARTUP command)
 DHCP enabled (see NET command)
 4 Ethernet users (see NET USERS command)
 Prompts off (see PROMPT command)

RF Connector


N or SMA female

Operating Temperature Range

0°C to +50°C

Outline Drawing Numbers

092-6774 (50PMA-036 N)
 092-10282 (50PMA-036 SMA)

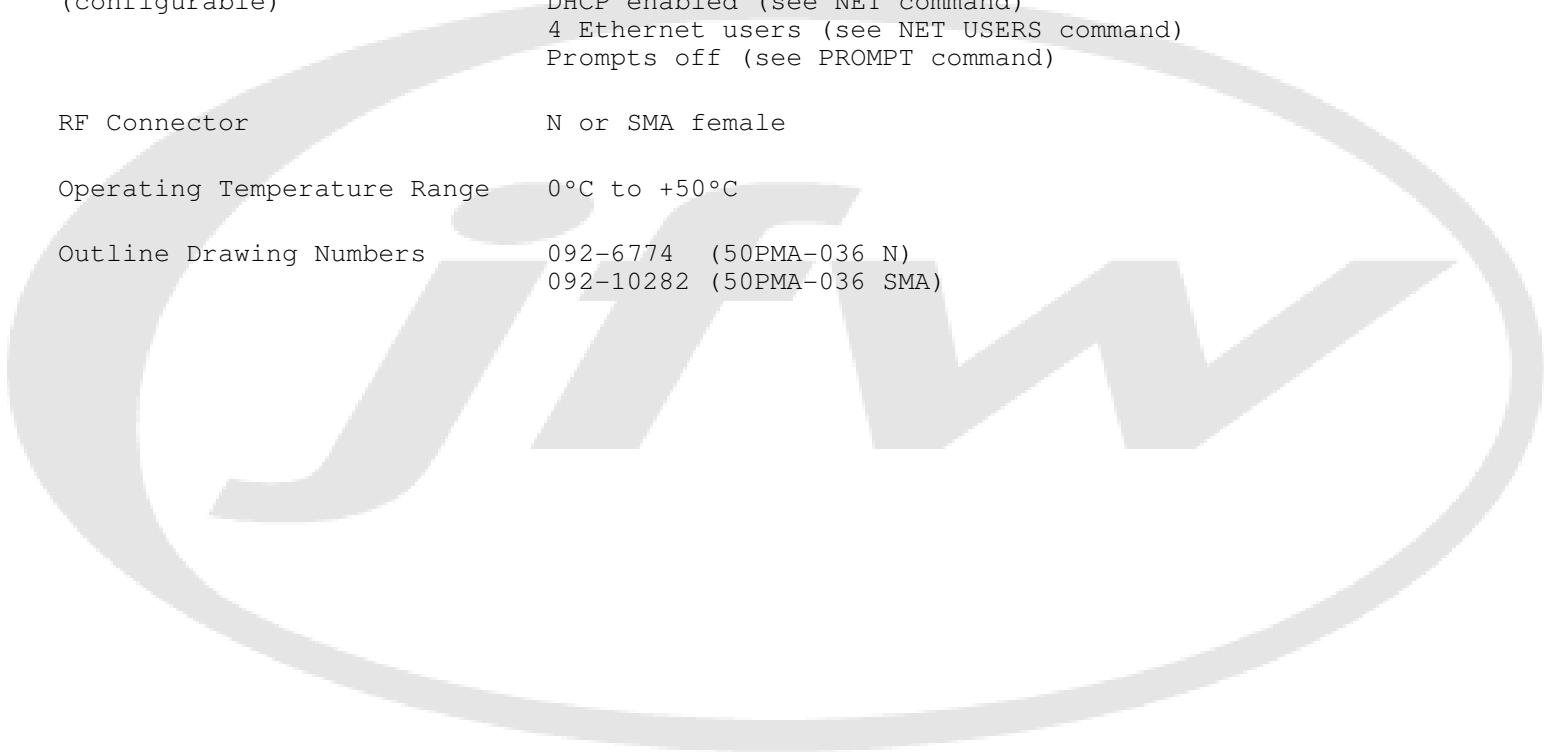

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	10/29/2010		TRS 10/29/2010	24239	09/09/2014	C	TRS 09/09/2014
19350	11/01/2010	A	TRS 11/01/2010	28159	10/05/2017	D	CLK 10/05/2017
23225	09/10/2013	B	TRS 09/10/2013				