

**SPECIFICATION SHEET**

**JFW MODEL 50BA-002-63**

**BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Frequency Range	200-6000 MHz
Configuration	Two individually controlled solid-state programmable attenuators
Enclosure Type	Mini-benchtop
Impedance	50 Ohms nominal
Attenuation Range	0-63 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command) Jog speed 5 (see JOG SPEED command)
VSWR	1.8:1 maximum 200-800 MHz 1.6:1 maximum 800-6000 MHz
Attenuation Accuracy (guaranteed monotonic)	± 0.50 dB 1-3 dB ± 0.75 dB 4-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-63 dB (whichever is greater)
Insertion Loss	6.6 dB maximum 2.7 dB typical @ 200 MHz 3.0 dB typical @ 700 MHz 3.7 dB typical @ 2000 MHz 6.3 dB typical @ 6000 MHz
RF Input Power*	+27 dBm average +33 dBm (no damage)
Switching Speed	3 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
DC Supply	+12 Vdc (100-240 VAC AC/DC transformer included)
Manual Control	Momentary Lever Actuator Switches with 7-Segment LED Displays (tap to step, hold to jog) (jog speed range is 0-10) (jog speed set to 0 will disable all levers)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

**--CONTINUED--**

**SPECIFICATION SHEET**

**JFW MODEL 50BA-002-63**

**BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt, Jog Speed

RF Connector

SMA female or N female


Operating Temperature Range

0°C to +50°C

Outline Drawing Numbers

092-6616 (SMA female)  
092-8847 (N female)

\* Units shipped before 8/9/2018 (date code 1832) are only rated at +20dBm maximum. The JFW date code is a four digit code (YYWW) that follows the six digit serial number. For example date code 1908 is the 8th week of 2019.

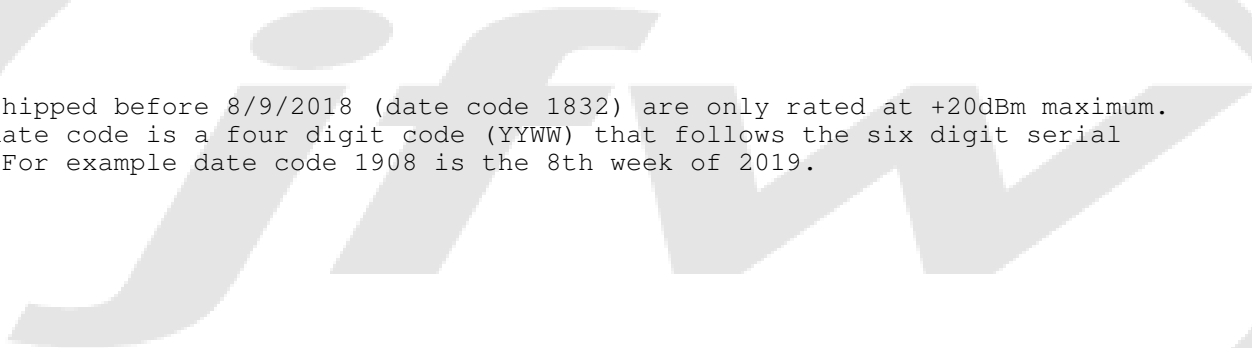

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	07/13/2010		CLK 07/13/2010	28940	08/09/2018	C	TRS 08/09/2018
18975	08/06/2010	A	CLK 08/06/2010	29857	10/02/2019	D	TRS 10/02/2019
24239	12/01/2014	B	TRS 12/01/2014	31243	07/30/2021	E	CLK 07/30/2021