## SPECIFICATION SHEET JFW MODEL 50MS-305 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

| Frequency Range | DC-6 | GHz |
|-----------------|------|-----|
|-----------------|------|-----|

| Configuration 18 x 4 Blocking Electro-Mechanica | cal Matrix | Switch |
|---|------------|--------|
|---|------------|--------|

(See block diagram 092-7410) (maximum of 4 active RF paths)

(inputs & outputs are self-terminating\*)

(all ports are bi-directional)

(the ADMIN password is located on rear panel)

Startup/Default States

(configurable)

All ports off at startup (see MATRIX command)  $\,$ 

DHCP enabled (see NET command)
4 Ethernet users (see NET command)
Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

Enclosure Type 19 inch rack mount @ 4RU high

Impedance 50 Ohms nominal

VSWR 1.2:1 typical DC-2GHz 1.3:1 typical 2-4GHz

1.4:1 typical 4-6GHz

1.5:1 maximum DC-2GHz 1.6:1 maximum 2-4GHz 1.7:1 maximum 4-6GHz

Insertion Loss 2.5 dB typical @ 6GHz 3.0 dB maximum DC-6GHz

Output to Output - 65 dB minimum

RF Input Power +30 dBm average (Hot Switched)

Switching Speed 20 milliseconds

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

## --CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

## SPECIFICATION SHEET JFW MODEL 50MS-305 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands Matrix Commands:

Matrix, Set Input, Set Output, Read Input, Read

Output, Read All Inputs, Read All Outputs, Read Matrix

Paths

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector SMA female

AC Supply 100-240 VAC @ 47-63 Hz

2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021

Temperature Range 0°C to +50°C

Physical Size See outline drawing 092-7409

 $^{\star}$  The unused inputs and outputs are terminated when the unit is powered only. If AC power is lost, all inputs and outputs are open.

| ECR/ECN | # DATE     | REV | APPR / DATE    | ECR/ECN # DATE | REV APPR / DATE |
|---------|------------|-----|----------------|----------------|-----------------|
|         | 07/17/2012 |     | BAC 08/22/2012 |                |                 |
| 24239   | 07/15/2015 | A   | TRS 07/15/2015 |                |                 |
|         |            |     |                |                |                 |

Page 2 of 2 JFW FORM E-7-F REV F