## SPECIFICATION SHEET JFW MODEL 50MS-323 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency	Range	700-3000 N	MHz
-----------	-------	------------	-----

Configuration	1 2	**	1 2	Plagking	Solid-State	Ma + m + m	Crait ah
Configuration	$\perp$ $\angle$	X	$\perp$ $\angle$	PTOCKTHA	SOLIU-State	Matrix	SMILCH

(see block diagram 092-8812)

(unused input ports are self-terminating)
(unused output ports are self-terminating)

(all ports are bi-directional)

(the ADMIN password is located on rear panel)

Startup/Default States

(configurable)

All ports off at startup (see MATRIX command)

DHCP enabled (see NET command)
4 Ethernet users (see NET command)
Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

Enclosure Type 19 inch rack mount @ 7RU high

Impedance 50 Ohms nominal

VSWR 1.5:1 typical / 1.8:1 maximum

Insertion Loss 6 dB typical @ 700MHz 8 dB typical @ 3000MHz

Output to Output - 70 dB typical

- 60 dB minimum

Input to Output - 70 dB typical - 60 dB minimum

RF Input Power +30 dBm average

Switching Speed 50 microseconds

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

## --CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

## SPECIFICATION SHEET JFW MODEL 50MS-323 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Command Format

Matrix Commands:

Matrix, Set Input, Set Output, Read Input, Read

Output, Read All Inputs, Read All Outputs, Read Matrix

Paths

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector

N female

AC Supply

100-240 VAC @ 47-63 Hz

4 Amp 5x20mm "Slo-Blo" AC fuse

Littelfuse #215-004, JFW #025-018

Temperature Ranges

Operating:  $0^{\circ}C$  to  $+70^{\circ}C$ 

Storage: -55°C to +85°C

Physical Size

See outline drawing 092-7858

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN # DATE	REV APPR / DATE
	10/30/2013		BAC 10/30/2013		
24239	07/15/2015	А	TRS 07/15/2015		
27728	04/19/2017	В	TRS 04/19/2017		

Page 2 of 2 JFW FORM E-7-F REV F