SPECIFICATION SHEET JFW MODEL 50MS-334 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

| Frequency Range 70 | 0-3000 | MHz |
|--------------------|--------|-----|
|--------------------|--------|-----|

Configuration 2 x 12 Blocking Solid-State Matrix Switch

(See block diagram 092-8811)

(Unused input ports self-terminating) (Unused output ports self-terminating)

(all ports are bi-directional)

(the ADMIN password is located on rear panel)

Startup/Default States

(configurable)

All ports off at startup (see MATRIX command)

DHCP enabled (see NET command)
4 Ethernet users (see NET command)
Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

Enclosure Type 19 inch rack mount @ 3RU high

Impedance 50 Ohms nominal

VSWR 1.5:1 typical / 1.8:1 maximum

Insertion Loss 4.0 dB typical @ 700MHz 6.5 dB typical @ 3000MHz

Isolation Input to Input - 70 dB typical

- 60 dB minimum

Output to Output - 70 dB typical

- 60 dB minimum

Input to Output - 70 dB typical

- 60 dB minimum

RF Input Power +30 dBm average

Switching Speed 50 microseconds

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET JFW MODEL 50MS-334 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands Matrix Commands:

Matrix, Set Input, Set Output, Read Input, Read

Output, Read All Inputs, Read All Outputs, Read Matrix

Paths

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector N female

AC Supply 100-240 VAC @ 47-63 Hz

2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021

Temperature Ranges Operating: 0°C to +70°C

Storage: -55°C to +85°C

Physical Size See outline drawing 092-8164

| ECR/ECN | # DATE | REV | APPR / DATE | ECR/ECN # DATE | REV APPR / DATE |
|---------|------------|-----|----------------|----------------|-----------------|
| | 11/17/2014 | | BAC 11/17/2014 | | |
| 24239 | 07/14/2015 | A | TRS 07/14/2015 | | |
| 27728 | 04/19/2017 | В | TRS 04/19/2017 | | |

Page 2 of 2 JFW FORM E-7-F REV F