SPECIFICATION SHEET JFW MODEL 50MS-356 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range DC-26.5 GHz

Configuration 2 x 12 Blocking Electro-Mechanical Matrix Switch

(See block diagram 092-8811)

(Unused input ports are terminated) (Unused output ports are terminated)

(all ports are bi-directional)

(the ADMIN password is located on rear panel)

Startup/Default States

(configurable)

All ports off at startup (see MATRIX command)

DHCP enabled (see NET command)
4 Ethernet users (see NET command)
Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

Enclosure Type 19 inch rack mount @ 4RU high

Impedance 50 Ohms nominal

VSWR Typical:

1.35:1 typical DC-8GHz 1.50:1 typical 8-12.4GHz 1.70:1 typical 12.4-18GHz 1.90:1 typical 18-26.5GHz

Maximum:

1.6:1 maximum DC-8GHz 2.4:1 maximum 8-26.5GHz

Insertion Loss

Typical:

3.25dB typical DC-8GHz 4.25dB typical 8-12.4GHz 5.75dB typical 12.4-18GHz 8.75dB typical 18-26.5GHz

Maximum:

4.0dB maximum DC-8GHz 9.5dB maximum 8-26.5GHz

Isolation Typical:

90dB typical DC-12.4GHz 80dB typical 12.4-18GHz 65dB typical 18-26.5GHz

Minimum:

70 dB minimum DC-8GHz 60 dB minimum 8-18GHz 50 dB minimum 18-26.5GHz

RF Input Power

8 Watts average (cold switched) 0.25 Watt average (hot switched)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET JFW MODEL 50MS-356 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Switching Speed 20 milliseconds

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

Remote Commands Matrix Commands:

Matrix, Set Input, Set Output, Read Input, Read

Output, Read All Inputs, Read All Outputs, Read Matrix

Paths

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector SMA female

AC Supply 100-240 VAC @ 47-63 Hz

2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021

Operating Temperature Range 0° to +70° C

Physical Size See outline drawing 092-8659

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN # DATE	REV APPR / DATE
	07/08/2016		BAC 07/08/2016		
27728	04/19/2017	A	TRS 04/19/2017		

Page 2 of 2 JFW FORM E-7-F REV F