SPECIFICATION SHEET JFW MODEL 50MS-420 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency E	Range	20-3000	MHz
-------------	-------	---------	-----

Configuration	16	х	16	Non-Blocking	Solid-State	Matrix	Switch

(See block diagram 092-9779)

(Unused input ports are self-terminating) (Unused output ports are self-terminating)

(all ports are bi-directional)

(the ADMIN password is located on rear panel)

Enclosure Type 19 inch rack mount @ 7RU high

Impedance 50 Ohms nominal

VSWR 1.9:1 maximum

1.5:1 typical (input ports)
1.7:1 typical (output ports)

Insertion Loss 16.9 dB typical @ 20 MHz 20.7 dB typical @ 3000 MHz

Isolation Output to Output - 25 dB typical (Set to same input) - 21 dB minimum

Output to Output

(Set to diff inputs) - 90 dB typical

- 60 dB minimum

Input to Output - 90 dB typical

- 60 dB minimum

Input to Input - 70 dB typical

- 60 dB minimum

RF Input Power +30 dBm 20-3000 MHz (input ports)

+20 dBm 20-100 MHz (output ports) +30 dBm 100-3000 MHz (output ports)

Switching Speed 20 microseconds

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

-- CONTINUED --

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET JFW MODEL 50MS-420 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Startup/Default States

(configurable)

All ports off at startup (see MATRIX command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

Remote Commands

Matrix Commands:

Matrix, Set Input, Set Output, Read Input, Read Output, Read All Inputs, Read All Outputs, Read Matrix

Paths

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD,

Date, Message, Restrict, IDENT, Name, Show Users,

Reboot, Uptime, Prompt

RF Connector

N female or SMA female

AC Supply

100-240 VAC @ 47-63 Hz

Operating Temperature

 $0^{\circ}C$ to $+50^{\circ}C$

Physical Size

See outline drawing 092-6960

ECR/ECN # DATE	REV APPR / DATE	ECR/ECN # DATE	REV APPR / DATE
08/26/2021	TRS 08/26/2021		

Page 2 of 2 JFW FORM E-7-F REV F