SPECIFICATION SHEET JFW MODEL 50MS-426 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range	350-6000 MHz				
Configuration	8 x 8 Non-Blocking Solid-State Matrix Switch (See block diagram 092-2886) (Unused input ports are self-terminating) (Unused output ports are self-terminating) (all ports are bi-directional) (the ADMIN password is located on rear panel)				
Startup/Default States (configurable)	All ports off at startup (see MATRIX command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command)				
	All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.				
Enclosure Type	19 inch rack mount @ 4RU high				
Impedance	50 Ohms nominal				
VSWR	1.7:1 typical 2.0:1 maximum				
Insertion Loss	12.7 dB typical @ 350 MHz 15.0 dB typical @ 3000 MHz 18.8 dB typical @ 6000 MHz				
Isolation	Output to Output (Set to same input) - 15 dB typical (350-500 MHz) - 14 dB minimum (350-500 MHz) - 25 dB typical (500-6000 MHz) - 20 dB minimum (500-6000 MHz)				
	Output to Output (Set to diff inputs) - 75 dB typical - 60 dB minimum				
	Input to Output - 95 dB typical - 80 dB minimum				
	Input to Input - 75 dB typical - 60 dB minimum				
RF Input Power	+30 dBm (input ports) +27 dBm (output ports)				
Switching Speed	10 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)				

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

JFW MODEL 50MS-426 MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

Remote Commands Matrix Commands:

Matrix, Set Input, Set Output, Read Input, Read

Output, Read All Inputs, Read All Outputs, Read Matrix

Paths

System Commands:

Help, Identification, Store, Recall, Pause,

Net, Serial, Close, Disconnect, MOTD,

Date, Message, Restrict, IDENT, Name, Show Users,

Reboot, Uptime, Prompt

RF Connector N or SMA female

AC Supply 100-240 VAC @ 47-63 Hz

Temperature Ranges Operating: 0°C to +70°C

Storage: -55°C to +85°C

Physical Size See outline drawing: 092-9845 (SMA)

092-9846 (N)

ECR/ECN # DATE	REV APPR / I	DATE ECR/ECN	DATE	REV	APPR / DATE
03/15/2022	CLK 03/	/15/2022			
32012 07/21/2022	A CLK 07/2	/21/2022			

Page 2 of 2 JFW FORM E-7-F REV F