

SPECIFICATION SHEET

JFW MODEL 50PA-1241

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	2-8 GHz
Configuration	8 x 1 LC Handover Test System (see block diagram 092-8463 for attenuator addressing) (all ports are bi-directional) (limited fan-out configuration) (the ADMIN password is located on rear panel)
Enclosure Type	19 inch rack mount @ 2RU high
Impedance	50 Ohms nominal
Attenuation Range	0-95 dB in 1 dB steps
VSWR	1.7:1 maximum 1.4:1 typical
Insertion Loss	25.5 dB maximum 23.3 dB typical
Power Divider Isolation	20 dB minimum > 24 dB typical
Attenuation Accuracy	± 0.50 dB 1-3 dB ± 0.75 dB 4-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater) (guaranteed monotonic)
RF Input Power	+27 dBm average
Switching Speed	4 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET

JFW MODEL 50PA-1241

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

Startup/Default States
(configurable)

Maximum attenuation (see ATTEN command)
DHCP enabled (see NET command)
4 Ethernet users (see NET command)
Prompts off (see PROMPT command)

All of these default settings can be changed by user.
Unit can be configured for up to 12 Ethernet users.

RF Connector

N or SMA female

AC Supply


100-240 VAC @ 47-63 Hz

Temperature Range

0°C to +50°C

Physical Size

See outline drawing 092-9887

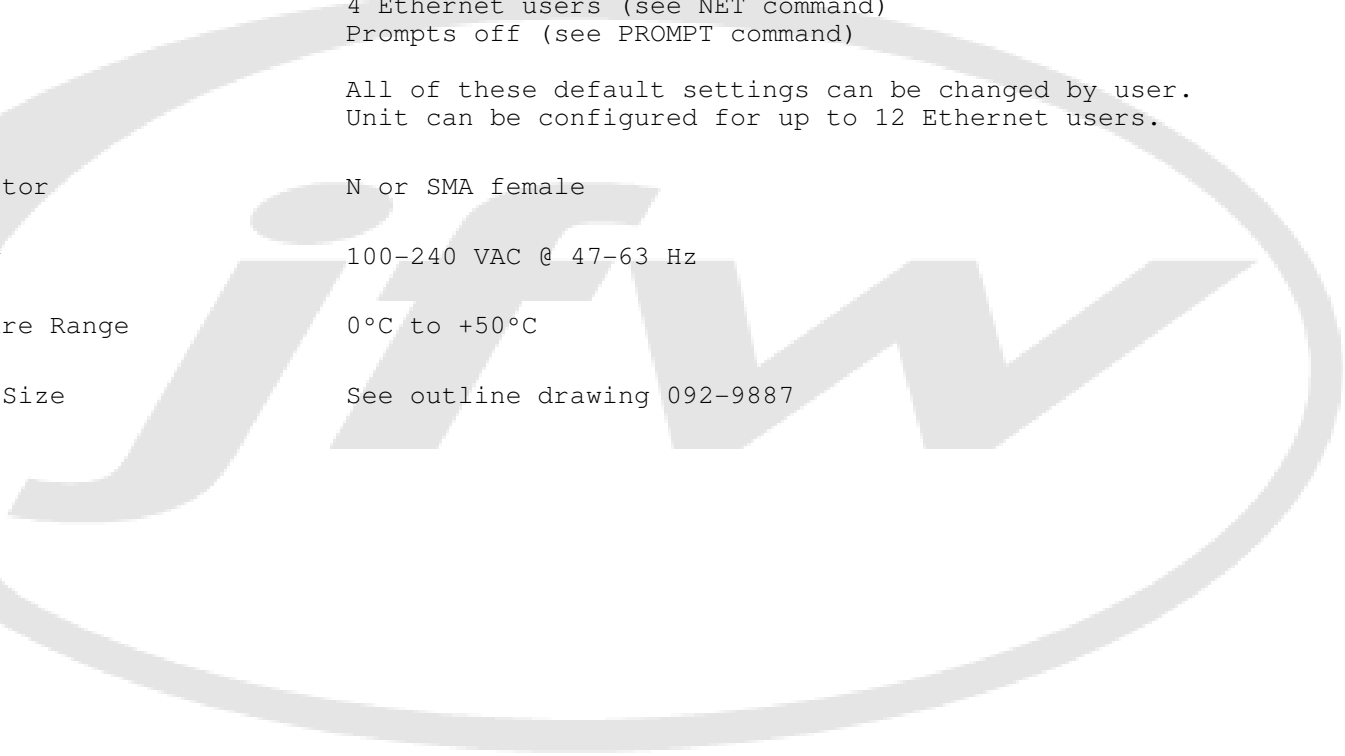

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	05/19/2022		TRS 05/19/2022				