

SPECIFICATION SHEET**JFW MODEL 50PA-1250-XX****PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	200-7125 MHz
Attenuation Range	0-95 dB in 1 dB steps
Configuration	Individually controlled solid-state programmable attenuators. Number of attenuators can be selected from 9 to 16 attenuators.
Enclosure Type	19 inch rack mount (2RU high for 9-16 attenuators w/ SMA female) (3RU high for 9-12 attenuators w/ N female) (4RU high for 13-16 attenuators w/ N female)
Impedance	50 Ohms nominal
VSWR	2.2:1 maximum 1.8:1 typical
Attenuation Accuracy	± 0.50 dB maximum (1-3 dB) ± 0.75 dB maximum (4-7 dB) ± 1.00 dB maximum (8-11 dB) ± 1.25 dB or 6% maximum (12-95 dB) ± 1.25 dB or 3% typical (12-95 dB) (whichever is greater)
Insertion Loss	10.7 dB maximum 3.6 dB typical @ 200 MHz 7.7 dB typical @ 6000 MHz 9.7 dB typical @ 7125 MHz
RF Input Power	+27 dBm average +33 dBm no damage
Switching Speed	4 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET

JFW MODEL 50PA-1250-XX

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

Startup/Default States (configurable)

Attenuators to 95dB at startup (see ATTEN command)
DHCP enabled (see NET command)
4 Ethernet users (see NET command)
Prompts off (see PROMPT command)

RF Connector

N female or SMA female

Operating Temperature Range

0°C to +50°C

AC Supply

100-240 VAC @ 47-63 Hz

Outline Drawing Numbers

092-8343 (SMA female, 9-16 attenuators)
092-8383 (N female, 9-12 attenuators)
092-8384 (N female, 13-16 attenuators)

Example Model Numbers

50PA-1250-09 SMA (9 attenuator)
50PA-1250-10 SMA (10 attenuators)
50PA-1250-11 SMA (11 attenuators)
50PA-1250-12 SMA (12 attenuators)
50PA-1250-13 SMA (13 attenuators)
50PA-1250-14 SMA (14 attenuators)
50PA-1250-15 SMA (15 attenuators)
50PA-1250-16 SMA (16 attenuators)
50PA-1250-09 N (9 attenuator)
50PA-1250-10 N (10 attenuators)
50PA-1250-11 N (11 attenuators)
50PA-1250-12 N (12 attenuators)
50PA-1250-13 N (13 attenuators)
50PA-1250-14 N (14 attenuators)
50PA-1250-15 N (15 attenuators)
50PA-1250-16 N (16 attenuators)

Future Expansion

If your testing needs change, you can have your 50PA-1250-XX upgraded to have additional attenuators. This model is designed to control up to a maximum of 16 attenuators.

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	07/28/2022		TRS 07/28/2022				