SPECIFICATION SHEET

JFW MODEL 50PA-126-XX

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Attenuation Range 0-63 dB in 1 dB steps

Configuration Individually controlled solid-state programmable attenuators. Number of attenuators can be selected from 1 to 8 attenuators.

Enclosure Type 19 inch rack mount 2RU high (for 1-8 attenuators)

Impedance

50 Ohms nominal

Startup/Default States (configurable) Maximum attenuation (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command)

> All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

VSWR

1.8:1 maximum 200-800 MHz 1.6:1 maximum 800-6000 MHz

Attenuation Accuracy

± 0.50 dB 1-3 dB ± 0.75 dB 4-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-63 dB (whichever is greater) (guaranteed monotonic)

2.7 dB typical @ 200 MHz 3.0 dB typical @ 700 MHz 3.7 dB typical @ 2000 MHz 6.3 dB typical @ 6000 MHz

6.6 dB maximum

+27 dBm average +33 dBm no damage

Insertion Loss

RF Input Power*

Switching Speed

Manual Gautari

Manual Control

Remote Control

3 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)

20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET JFW MODEL 50PA-126-XX

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands	Attenuator Control Commands: Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover System Commands: Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt				
RF Connector	SMA or N female				
Operating Temperature Range	0°C to +50°C				
AC Supply	100-240 VAC @ 47-63 Hz				
Outline Drawing Numbers	092-8261 (N female, 1-8 attenuators) 092-8262 (SMA female, 1-8 attenuators)				
Example Model Numbers	50PA-126-01 SMA (1 attenuator) 50PA-126-02 SMA (2 attenuators) 50PA-126-03 SMA (3 attenuators) 50PA-126-04 SMA (4 attenuators) 50PA-126-05 SMA (5 attenuators) 50PA-126-06 SMA (6 attenuators) 50PA-126-07 SMA (7 attenuators) 50PA-126-08 SMA (8 attenuators) 50PA-126-08 N (1 attenuator) 50PA-126-08 N (8 attenuators)				
Future Expansion	If your testing needs change, you can have your 50PA- 126-XX upgraded to have additional attenuators. This model is designed to control up to a maximum of 8 attenuators.				

* Units shipped before 8/9/2018 (date code 1832) are only rated at +20dBm maximum. The JFW date code is a four digit code (YYWW) that follows the six digit serial number. For example date code 1908 is the 8th week of 2019.

	ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN	# DATE	REV	APPR / DATE	
		06/01/2015		TRS 06/01/2015	29857	10/02/2019	С	TRS 10/02/2019	
	28940	08/09/2018	A	TRS 08/09/2018					
	29850	09/30/2019	В	TRS 09/30/2019					
of 2		JFW FORM E-7-F REV F							