SPECIFICATION SHEET

JFW MODEL 50PA-128-XX

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 200-6000 MHz

Attenuation Range 0-95 dB in 1 dB steps

Configuration Individually controlled solid-state programmable

attenuators. Number of attenuators can be selected

from 1 to 8 attenuators.

Enclosure Type 19 inch rack mount

2RU high (for 1-8 attenuators)

Impedance 50 Ohms nominal

Startup/Default States Maximum attenuation (see ATTEN command)

(configurable)

DHCP enabled (see NET command)

4 Ethernet users (see NET command)

Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

VSWR 2.0:1 maximum

< 1.9:1 typical 200-700 MHz < 1.6:1 typical 700-6000 MHz

Attenuation Accuracy \pm 0.50 dB 1-3 dB

± 0.75 dB 4-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater) (guaranteed monotonic)

Insertion Loss 8.8 dB maximum

4.0 dB typical @ 200 MHz 4.5 dB typical @ 700 MHz 8.2 dB typical @ 6000 MHz

RF Input Power* +27 dBm average

+33 dBm no damage

Switching Speed 4 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET

JFW MODEL 50PA-128-XX

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector SMA or N female

Operating Temperature Range 0°C to +50°C

AC Supply 100-240 VAC @ 47-63 Hz

Outline Drawing Numbers 092-8261 (N female, 1-8 attenuators)

092-8262 (SMA female, 1-8 attenuators)

Example Model Numbers 50PA-128-01 SMA (1 attenuator) 50PA-128-02 SMA (2 attenuators)

50PA-128-03 SMA (3 attenuators) 50PA-128-04 SMA (4 attenuators) 50PA-128-05 SMA (5 attenuators) 50PA-128-06 SMA (6 attenuators)

50PA-128-06 SMA (6 attenuators) 50PA-128-07 SMA (7 attenuators) 50PA-128-08 SMA (8 attenuators) 50PA-128-01 N (1 attenuator) 50PA-128-08 N (8 attenuators)

Future Expansion If your testing needs change, you can have your 50PA-

128-XX upgraded to have additional attenuators. This model is designed to control up to a maximum of 8

attenuators.

* Units shipped before 10/5/2017 (date code 1740) are only rated at $+20 \, \mathrm{dBm}$ maximum. The JFW date code is a four digit code (YYWW) that follows the six digit serial number. For example date code 1908 is the 8th week of 2019.

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN	# DATE	REV	APPR / DATE
	06/01/2015		TRS 06/01/2015	29850	09/30/2019	С	TRS 09/30/2019
28159	10/05/2017	Α	CLK 10/05/2017	29857	10/02/2019	D	TRS 10/03/2019
28495	02/09/2018	В	TRS 02/09/2018				

Page 2 of 2 JFW FORM E-7-F REV F