

**SPECIFICATION SHEET****JFW MODEL 50PA-1287-XX****PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Frequency Range	200-7125 MHz
Attenuation Range	0-95 dB in 1 dB steps
Configuration	Individually controlled solid-state programmable attenuators. Number of attenuators can be selected from 1 to 4 attenuators.
Manual Control & Display	Momentary Lever Switches with 7-Segment LED Displays (current dB settings displayed at all times) (each attenuator has its own lever switch) (tap lever to step, hold lever to jog) (jog speed range is 0-10) (jog speed set to 0 will disable all levers)
Enclosure Type	19 inch rack mount at 1RU high
Impedance	50 Ohms nominal
RF Connector	SMA or N female
VSWR	2.2:1 maximum 1.8:1 typical
Attenuation Accuracy	$\pm 0.50$ dB maximum (1-3 dB) $\pm 0.75$ dB maximum (4-7 dB) $\pm 1.00$ dB maximum (8-11 dB) $\pm 1.25$ dB or 6% maximum (12-95 dB) $\pm 1.25$ dB or 3% typical (12-95 dB) (whichever is greater)
Insertion Loss	10.7 dB maximum 3.6 dB typical @ 200 MHz 7.7 dB typical @ 6000 MHz 9.7 dB typical @ 7125 MHz
RF Input Power*	+27 dBm average +33 dBm no damage
Switching Speed	4 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

**--CONTINUED--**

## SPECIFICATION SHEET

**JFW MODEL 50PA-1287-XX**

### **PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

#### Remote Commands

#### Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All  
Attenuators, Read All Attenuators, Read All Extended,  
Fade Attenuator, Variable Attenuator Handover, Block,  
Set Block, Read Block, Read All Blocks, Fade Block,  
Variable Block Handover

#### System Commands:

Help, Identification, Store, Recall, Pause, Net,  
Serial, Close, Disconnect, MOTD, Date, Message,  
Restrict, IDENT, Name, Show Users, Reboot, Uptime,  
Prompt, Startup, Wipe, Jog Speed

#### Startup/Default States (configurable)

Attenuators to 95dB at startup (see ATTEN command)  
DHCP enabled (see NET command)  
4 Ethernet users (see NET command)  
Prompts off (see PROMPT command)

All of these default settings can be changed by user.  
Unit can be configured for up to 12 Ethernet users.

Operating Temperature Range 0°C to +50°C

AC Supply 100-240 VAC @ 47-63 Hz

#### Outline Drawing Numbers

092-8456-01 (N female, 1 attenuator)  
092-8456-02 (N female, 2 attenuators)  
092-8456-04 (N female, 4 attenuators)  
092-9408-01 (SMA female, 1 attenuator)  
092-9408-02 (SMA female, 2 attenuators)  
092-9408-04 (SMA female, 4 attenuators)

#### Example Model Numbers

50PA-1287-01 SMA (1 attenuators)  
50PA-1287-02 SMA (2 attenuators)  
50PA-1287-03 SMA (3 attenuators)  
50PA-1287-04 SMA (4 attenuators)  
50PA-1287-01 N (1 attenuators)  
50PA-1287-02 N (2 attenuators)  
50PA-1287-03 N (3 attenuators)  
50PA-1287-04 N (4 attenuators)

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	11/04/2024		TRS 11/04/2024				