SPECIFICATION SHEET

JFW MODEL 50PA-507

BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 200-6000 MHz

Configuration Nine individually controlled

solid-state programmable attenuators

Enclosure Type Benchtop

Impedance 50 Ohms nominal

Attenuation Range 0-63 dB in 1 dB steps

Startup/Default States

(configurable)

Maximum attenuation (see ATTEN STARTUP command)

DHCP enabled (see NET command)

4 Ethernet users (see NET USERS command

Prompts off (see PROMPT command)

VSWR 1.8:1 maximum 200-800 MHz

1.6:1 maximum 800-6000 MHz

1.6:1 maximum 800-6000 MHz

Attenuation Accuracy \pm 0.50 dB 1-3 dB (guaranteed monotonic) \pm 0.75 dB 4-7 dB \pm 1.00 dB 8-11 dB

± 1.25 dB or 4% 12-63 dB (whichever is greater)

Insertion Loss 6.6 dB maximum

2.7 dB typical @ 200 MHz 3.0 dB typical @ 700 MHz 3.7 dB typical @ 2000 MHz

6.3 dB typical @ 6000 MHz

RF Input Power* +27 dBm average

+33 dBm (no damage)

Switching Speed 3 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET

JFW MODEL 50PA-507

BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users,

Reboot, Uptime, Prompt

RF Connector

SMA female

Operating Temperature Range

 $0^{\circ}C$ to $+50^{\circ}C$

AC Supply

100-240 VAC @ 47-63 Hz

Physical Size

See outline drawing 092-5989

* Units shipped before 8/9/2018 (date code 1832) are only rated at $+20\,\mathrm{dBm}$ maximum. The JFW date code is a four digit code (YYWW) that follows the six digit serial number. For example date code 1908 is the 8th week of 2019.

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN	# DATE	REV	APPR / DATE
17674	09/11/2009	A	CLK 09/11/2009	24239	07/03/2014	D	TRS 07/03/2014
17977	12/16/2009	В	CLK 12/16/2009	28940	08/09/2018	E	TRS 08/09/2018
18148	01/22/2010	С	CLK 01/22/2010	29857	10/02/2019	F	TRS 10/02/2019

Page 2 of 2 JFW FORM E-7-F REV F