#### SPECIFICATION SHEET

#### JFW MODEL 50PA-950

## PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 500-6000 MHz

Configuration 4 x 8 Handover Test System

(see block diagram 092-6344 for attenuator addressing)

(all ports are bi-directional)
(full fan-out configuration)

(the ADMIN password is located on rear panel)

Enclosure Type 19 inch rack mount @ 6RU high

Impedance 50 Ohms nominal

Attenuation Range 0-95 dB in 1 dB steps

Startup/Default States Maximum attenuation (see ATTEN command)

(configurable)

DHCP enabled (see NET command)

4 Ethernet users (see NET command)

Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

VSWR 1.8:1 maximum

< 1.6:1 typical (Inputs) < 1.5:1 typical (Outputs)

Insertion Loss 36 dB maximum

34 dB typical

Power Divider Isolation 20 dB minimum

Attenuation Accuracy  $\pm$  0.50 dB 1-3 dB  $\pm$  0.75 dB 4-7 dB

 $\pm$  0.75 dB 4-7 dB  $\pm$  1.00 dB 8-11 dB  $\pm$  1.25 dB or 4% 12-95 dB (whichever is greater) (guaranteed monotonic)

RF Input Power +33 dBm average (Input ports)

+30 dBm average (Output ports)

Switching Speed 4 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

### --CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

# SPECIFICATION SHEET

#### JFW MODEL 50PA-950

## PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Attenuator Control Commands: Remote Commands

> Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector N or SMA female

100-240 VAC @ 47-63 Hz AC Supply

2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021

Temperature Range  $0^{\circ}C$  to  $+50^{\circ}C$ 

Physical Size See outline drawing 092-8349

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN # DATE	REV APPR / DATE
	07/10/2015		TRS 07/10/2015		
28159	10/05/2017	A	CLK 10/05/2017		
29691	07/29/2019	В	CLK 07/29/2019		

Page 2 of 2 JFW FORM E-7-F REV F