SPECIFICATION SHEET

JFW MODEL 50PA-998-XX

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 30-3000 MHz

Attenuation Range 0-95 dB in 1 dB steps

Configuration Individually controlled solid-state programmable

attenuators. Number of attenuators can be selected

from 1 to 4 attenuators.

Manual Control & Display Momentary Lever Switches with 7-Segment LED Displays

(current dB settings displayed at all times)
(each attenuator has its own lever switch)
(tap lever to step, hold lever to jog)

(jog speed range is 0-10)

(jog speed set to 0 will disable all levers)

Enclosure Type 19 inch rack mount at 1RU high

Impedance 50 Ohms nominal

Startup/Default States Attenuators to 95dB at startup (see ATTEN command)

(configurable)

DHCP enabled (see NET command)

4 Ethernet users (see NET command)

Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

VSWR 2.2:1 maximum 30-800 MHz

1.6:1 maximum 800-3000 MHz

Attenuation Accuracy \pm 0.50 dB 1-7 dB \pm 1.00 dB 8-11 dB

± 1.00 dB 8-11 dB ± 1.25 or 3% 12-95 dB (whichever is greater) (guaranteed monotonic)

Insertion Loss 5.5 dB maximum

5.0 dB typical

RF Input Power +27 dBm average

+33 dBm no damage

Switching Speed 4 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET

JFW MODEL 50PA-998-XX

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt, Startup, Wipe, Jog Speed

RF Connector

N or SMA female

Operating Temperature Range

 0°C to $+50^{\circ}\text{C}$

AC Supply

100-240 VAC @ 47-63 Hz

Outline Drawing Numbers

092-8456-02 (N female, 2 attenuators) 092-8456-03 (N female, 3 attenuators) 092-8456-04 (N female, 4 attenuators) 092-9408-01 (SMA female, 1 attenuators) 092-9408-02 (SMA female, 2 attenuators) 092-9408-04 (SMA female, 4 attenuators)

Example Model Numbers

50PA-998-01 SMA (1 attenuators) 50PA-998-02 SMA (2 attenuators) 50PA-998-03 SMA (3 attenuators) 50PA-998-04 SMA (4 attenuators) 50PA-998-01 N (1 attenuators) 50PA-998-02 N (2 attenuators) 50PA-998-03 N (3 attenuators) 50PA-998-04 N (4 attenuators)

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN	# DATE	REV	APPR / DATE
	03/03/2016		TRS 03/03/2016	32172	10/11/2022	С	TRS 10/11/2022
28159	10/05/2017	A	CLK 10/05/2017				
31722	04/14/2022	В	TRS 04/14/2022				

Page 2 of 2 JFW FORM E-7-F REV F