JFW MODEL 50PMA-031 TRANSCEIVER TEST SYSTEM

Frequency Range	30-3000 MHz				
Configuration	6 Port Transceiver Test System with 2 RF Hubs (See Block Diagram 092-6680) (all ports are bi-directional) (limited fan-out configuration) (the ADMIN password is located on rear panel)				
Enclosure Type	19 inch rack mount @ 2RU high				
Impedance	50 Ohms nominal				
Switch Range	J1-J2 (solid-state)				
Attenuation Range	0-63 dB in 1 dB steps (solid-state)				
Startup/Default States (configurable)	All switches to port J1 at startup (see SWITCH command) All attenuators 63dB at startup (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command)				
VSWR	1.8:1 maximum < 1.6:1 typical				
Insertion Loss	24 dB nominal @ 30 MHz 30 dB nominal @ 3000 MHz				
Attenuation Accuracy (guaranteed monotonic)	± 0.3 dB 1-7 dB ± 0.5 dB or 2% 8-63 dB (whichever is greater)				
RF Input Power	+20 dBm average				
Switching Speed	2 microseconds typical for Attenuators 10 microseconds typical for Switches (after command is received and processed) (3 milliseconds typical processing time)				
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)				

--CONTINUED--

SPECIFICATION SHEET JFW MODEL 50PMA-031 TRANSCEIVER TEST SYSTEM	JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com					
Remote Commands	Switch Control Commands: Switch, Set Switch, Read Switch, Set All Switches, Read All Switches					
	Attenuator Control Commands: Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover					
	System Commands: Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt					
RF Connector	SMA female					
AC Supply	100-240 VAC @ 47-63 Hz 2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021					
Temperature Range	Operating: 0°C to +70°C Storage: -55°C to +85°C					
Physical Size	See outline drawing 092-6679					

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN	# DATE	REV	APPR / DATE
	08/04/2010		CLK 08/04/2010	24239	12/05/2014	С	TRS 12/05/2014
19343	10/28/2010	A	CLK 10/28/2010	25671	08/19/2015	D	TRS 08/19/2015
20538	09/06/2011	В	CLK 09/06/2011				