SPECIFICATION SHEET JFW MODEL 50PMA-080 TRANSCEIVER TEST SYSTEM

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 500-6000 MHz

Configuration 6 Port Transceiver Test System

(see block diagram 092-7697 for attenuator addressing)

(all ports are bi-directional)

(full fan-out i.e. every path has its own attenuator)

(the ADMIN password is located on rear panel)

Enclosure Type 19 inch rack mount @ 5RU high

Impedance 50 Ohms nominal

Attenuation Range 0-95 dB in 1 dB steps

Startup/Default States Maximum attenuation (see ATTEN STARTUP command)

(configurable) DHCP enabled (see NET command)

4 Ethernet users (see NET USERS command)

Prompts off (see PROMPT command)

VSWR 1.8:1 maximum

Attenuation Accuracy \pm 0.50 dB 1-3dB

± 1.00 dB 4-11dB
± 1.25 or 4% 12-95dB
(whichever is greater)
(guaranteed monotonic)

Insertion Loss 41 dB maximum

39 dB typical

Power Divider Isolation 20 dB minimum

RF Input Power 1 Watt average

Switching Speed 4 microseconds

(after command is received and processed)
(3 milliseconds typial processing time)

AC Supply 100-240 VAC @ 47-63 Hz

4 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-004, JFW #025-018

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

-- CONTINUED --

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET JFW MODEL 50PMA-080 TRANSCEIVER TEST SYSTEM

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Path, Read Path, Read All Paths, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector N, SMA or TNC female

Operating Temperature Range 0°C to +50°C

Outline Drawing Numbers 092-7887 (50PMA-080 N) 092-10044 (50PMA-080 SMA)

ECR/ECN # DATE REV APPR / DATE ECR/ECN # DATE REV APPR / DATE 28159 CLK 10/05/2017 11/25/2013 TRS 11/25/2013 10/05/2017 С 23656 01/17/2014 TRS 01/17/2014 32522 03/29/2023 D TRS 03/29/2023 A 09/09/2014 B 24239 TRS 09/09/2014

Page 2 of 2 JFW FORM E-7-F REV F