SPECIFICATION SHEET

JFW MODEL 75PA-086

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 5-1650 MHz

Configuration Three individually controlled

solid-state programmable attenuators

Enclosure Type Benchtop

Impedance 75 Ohms nominal

Attenuation Range 0-63 dB in 1 dB steps

Startup/Default States

(configurable)

Maximum attenuation (see ATTEN STARTUP command)

DHCP enabled (see NET command)

4 Ethernet users (see NET USERS command)

Prompts off (see PROMPT command)

VSWR 1.7:1 maximum

1.5:1 typical

Attenuation Accuracy ± 0.5 dB or 3% of programmed

(whichever is greater)
(guaranteed monotonic)

Insertion Loss 2.0 dB typical @ 5MHz

3.0 dB typical @ 1000MHz 4.0 dB typical @ 1650MHz 4.5 dB maximum 5-1650MHz

RF Input Power +10 dBm

Switching Speed 10 microseconds typical

(after command is received & processed)
(3 milliseconds typical processing time)

AC Supply 100-240 VAC @ 47-63 Hz

0.2 Amps @ 120 VAC nominal
0.1 Amps @ 240 VAC nominal
2 Amp 5x20mm "Slo-Blo" AC fuse
Littlefuse#215-002, JFW#025-021

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115,200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET

JFW MODEL 75PA-086

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read Block, Read All Blocks, Fade Block, Variable

Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot,

Uptime, Prompt

RF Connector

Physical Size

F female

Operating Temperature

 $0^{\circ}C$ to $+50^{\circ}C$

Range

See outline drawing 092-8113