#### SPECIFICATION SHEET

#### JFW MODEL 75PA-088

### PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range DC-1000 MHz

Configuration Two individually controlled

electromechanical programmable attenuators

Enclosure Type Benchtop

Impedance 75 Ohms nominal

Attenuation Range 0-95.5 dB in 0.5 dB steps

Startup/Default States

Maximum attenuation (see ATTEN STARTUP command) (configurable)

DHCP enabled (see NET command)

4 Ethernet users (see NET USERS command

Prompts off (see PROMPT command)

1.5:1 maximum **VSWR** 

Attenuation Accuracy ± 0.2 dB or 2% of programmed

(whichever is greater) (quaranteed monotonic)

Insertion Loss 3.0 dB maximum

RF Input Power 0.5 Watts average

Switching Speed 6 milliseconds typical

> (after command is received and processed) (3 milliseconds typical processing time)

100-240 VAC @ 47-63 Hz AC Supply

> 2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse#215-002, JFW#025-021

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

## --CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

# SPECIFICATION SHEET JFW MODEL 75PA-088 PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Block, Set Block, Read Block, Read All

Blocks

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot,

Uptime, Prompt

RF Connector F female

Temperature Range 0°C to +50°C

Physical Size See outline drawing 092-8245