#### SPECIFICATION SHEET

## JFW MODEL 75PA-113-XX

# PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 5-2150 MHz

Configuration Individually controlled solid-state programmable

attenuators. Number of attenuators can be selected

from 1 to 16 attenuators.

Enclosure Type 19 inch rack mount @ 2RU high

Impedance 75 Ohms nominal

RF Connector BNC or F female

Attenuation Range 0-95 dB in 1 dB steps

VSWR 2.0:1 maximum

Attenuation Accuracy  $\pm$  0.5 dB 1-14 dB (guaranteed monotonic)  $\pm$  0.75 or 3% 15-95 dB

(whichever is greater)

Insertion Loss 6 dB maximum

2.0 dB typical @ 5 MHz 3.9 dB typical @ 1218 MHz 4.5 dB typical @ 2150 MHz

RF Input Power +23 dBm average

Switching Speed 4 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (Up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

#### SPECIFICATION SHEET

# JFW MODEL 75PA-113-XX

## PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

Startup/Default States

(configurable)

Maximum attenuation (see ATTEN STARTUP command)

DHCP enabled (see NET command)

4 Ethernet users (see NET USERS command)

Prompts off (see PROMPT command)

AC Supply

100-240 VAC @ 47-63 Hz
0.2 Amps @ 120 VAC nominal
0.1 Amps @ 240 VAC nominal
2 Amp 5x20mm "Slo-Blo" AC fuse
Littelfuse#215-002, JFW#025-021

Operating Temperature Range

 $0^{\circ}C$  to  $+50^{\circ}C$ 

Outline Drawing Number

092-8926 (F female)

Example Model Numbers

75PA-113-01 BNC (1 attenuator with BNC female)
75PA-113-02 BNC (2 attenuators with BNC female)
75PA-113-04 BNC (4 attenuators with BNC female)
75PA-113-08 F (8 attenuators with F female)
75PA-113-10 F (10 attenuators with F female)
75PA-113-12 F (12 attenuators with F female)
75PA-113-14 F (14 attenuators with F female)
75PA-113-16 F (16 attenuators with F female)

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN # DATE	REV APPR / DATE
	05/09/2018		CLK 05/09/2018		
29140	11/09/2018	A	TRS 11/09/2018		
31843	06/23/2022	В	TRS 06/23/2022		

Page 2 of 2 JFW FORM E-7-F REV F